



# DNH

HEAD OFFICE, NORWAY  
DNH AS

Phone..... + 47 35 98 56 00  
Fax..... + 47 35 98 56 10  
E-mail..... dnh@dnh.no  
Web-Site..... www.dnh.no

ENGLAND

DNH WW Ltd

Phone..... + 44 1908 275 000  
Fax..... + 44 1908 275 100  
E-mail..... dnh@dnh.co.uk

GERMANY

DNH GmbH

Phone... + 49 040 6569 30-0  
Fax..... + 49 040 6569 30-30  
E-mail..... dnh@dnh.de



USA

DNH Speakers Inc


Phone..... + 1 484 494 5790  
Fax..... + 1 484 494 5793  
E-mail..... dnh@dnhspeakers.com

## MD-40(T)

ISO 9001 CERTIFIED

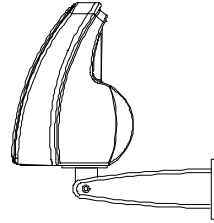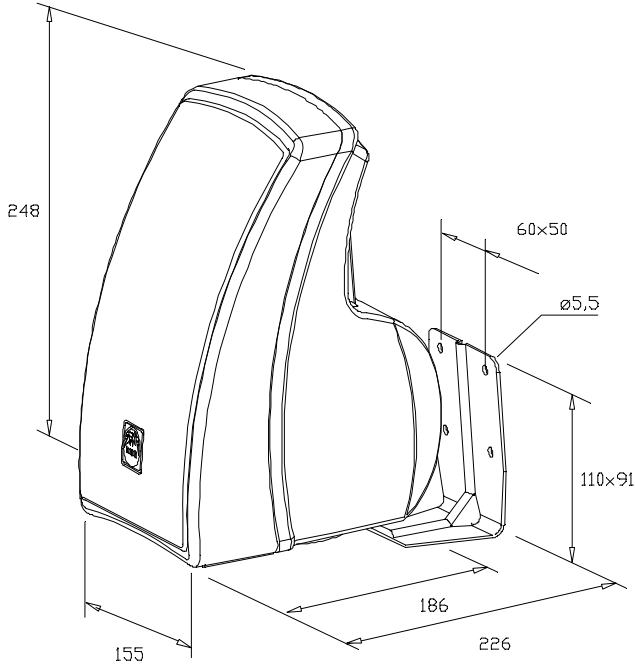


Optional  
IP bracket plastic

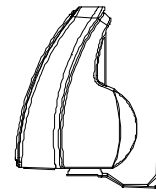

Standard bracket

MD-40 is delivered with standard  
bracket, backlid and cable glands.  
kabel dia 4-7,5mm - PG7

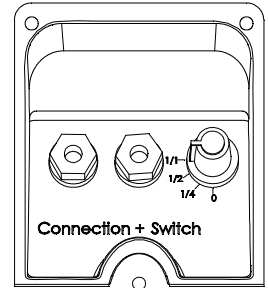

Secondary switch tappings	
1 / 1	40,0 W
1 / 2	20,0 W
1 / 4	10,0 W

Sound pressure levels at 1W/1m

SPL vs Freq



Specifications

Material / Color	ABS / Black
Mounting	Bracket
Termination	Screw terminal
Weight w/transformer	3,1 kg
IP-rating	44*
Max. / min. amb. temp	90°C / -40°C
Rated / max. power	40 W / 60 W
SPL 1W/1m	87 dB
SPL rated power	103 dB
Effective freq. range	70 – 20000 Hz
Dispersion (-6dB) 1kHz / 4kHz	105° / 50°
Options	Impedances, colors, labels

### Installation, Operation and Maintenance Procedures

- MD-40 is available with 40W transformer, and optional brackets are available on request.
- Screw bracket to wall or ceiling, place cabinet onto ball socket and tighten bolt.
- Connect to screw terminal and select required volume with the switch.
- Screw on lid with gasket and tighten cable glands to assure a good sealing towards cable.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with a 2 year warranty against defective workmanship.
- \* To achieve IP the loudspeaker should be mounted with the grill 30 degrees downwards.

DNH reserves the right to alter specifications without notice

